


LIGHTING INSTRUCTIONS

WARNING, before lighting:

Prior to turning the gas "on," inspect the gas supply piping or hose. Any evidence of cuts wear, or abrasion must be replaced prior to use.

The replacement pressure regulators and hose assembly must be the type specified by the manufacturer. Do not use the grill if the odor of gas is present. The pressure regulators and hose assembly supplied with the unit must be used. Locate the unit L.P., screw the regulator into the tank and leak check the hose and regulator connections with a soap and water solution before operating the grill. Turn all knobs to "off" then slowly turn on the gas supply valve.

Remember to always keep your face and body as far away from the grill as possible when lighting. Do not attempt to "light" the grill if the odor of gas is present. Call for service. Always wait at least 5 minutes before relighting a hot grill.

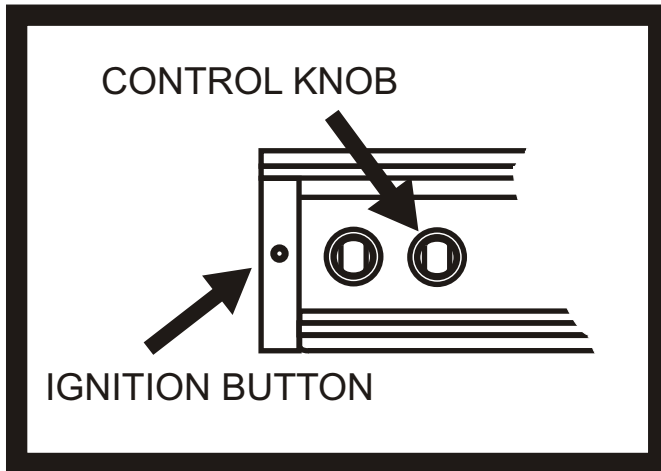

Grill Burners

To Light:

Open the lid, turn the corresponding knob on "Hi". Immediately press and hold the ignition button for 5 seconds. (See picture on left.) You will hear a "clicking" sound.

If the burner does not light in 5 seconds, turn knobs to "OFF" wait 3 minutes and try relighting, or try Match Lighting (see section on Match Lighting).

NOTE: If you don't hear clicking sound from the igniter turn all knobs to "OFF" and check ignition battery. Repeat the process after 3 minutes.

Rotis Burner (not all models)

To Light:

Open the lid. Turn the Rotis knob on "HI" and press it in. Press and hold the ignition button for 5 seconds. You will hear a "clicking" sound. If not, turn all knobs to "OFF" and check ignition battery.

If the burner does not light within 4 seconds, release the knob and turn the control knob to "OFF". Once lit, keep pressing and holding the knob in for 10 more seconds, then release it. The rotis burner should reach cooking temperature in about 1 minute. The orange or red glow will even out in about 5 minutes.

If burners do not light after several attempts, see instructions on match lighting, on next page)

Always wait at least 5 minutes before relighting a hot burner!