


# MATCH LIGHTING

## Match Lighting:

If burners do not light after several attempts, they can be match lit. If you have just attempted to light the burner with the igniter, allow 5 minutes for any accumulated gas to dissipate.


## Grill Burners: Make sure all knobs are in the OFF position.

Keep your face as far away from the grill as possible. With the lid open, light a paper book match and hold it to the ports of the burner using the lighting stick or lighting rod attached permanently to the appliance with a chain. Press and turn the corresponding control dial of the burner to "HI". If the burner does not light in 4 seconds, turn the dial off and wait 5 minutes before attempting again (see picture on the right).

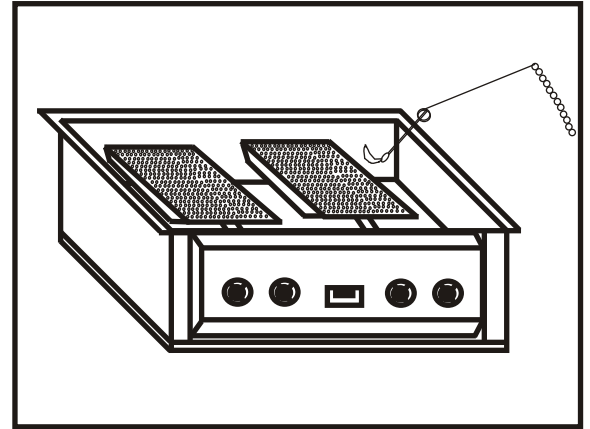

## Rotis Burner: Make sure all knobs are in the OFF position.

With the lid open, light a paper book match and hold it close to the burner tiles of the Infra-Red burner. Push and turn the Rotis control knob to "Hi" and push it in. Hold knob in for 10 seconds after lighting and then release. If the burner does not light in 4 seconds, turn the knob off and wait 5 minutes before attempting it again (see figure on right).

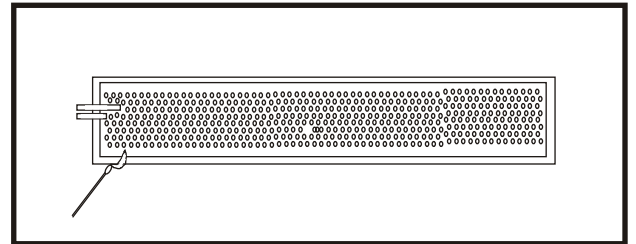

If the burner stays lit only while you are holding the safety button, it may be adjusted after it has been cooled) (as shown in figure on the right)