


# BURNER MAINTENANCE & CLEANING

## Burner Maintenance And Cleaning (continued)

### REASSEMBLE THE BURNERS:

When replacing the burner, align the orifice with the center hole on the air shutter. Slide the air shutter onto the orifice and rest the rear of the burner (the U shaped end) on the support rack at the back of the burner box. Make sure the burner is resting firmly and does not rock. Do not upset the original position of air during this procedure.

Light all burners and check the flames for irregularities. If adjustments are needed, see the adjustment section in your manual labeled: Burner Adjustments.

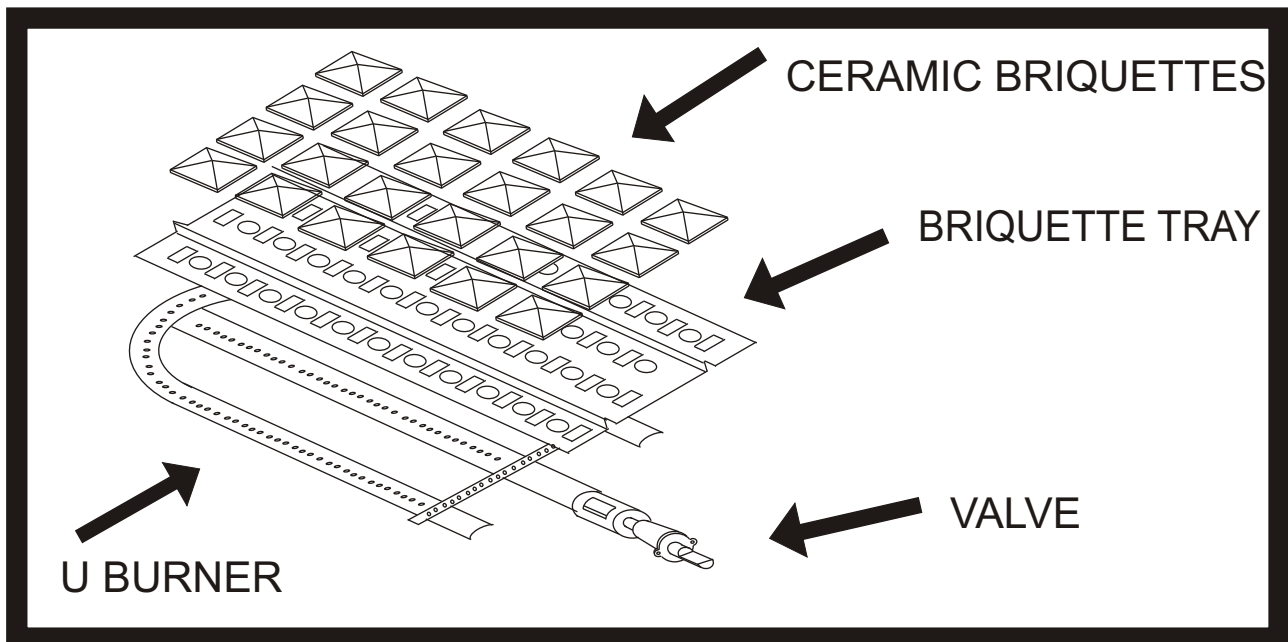

### ATTENTION

If the burners are not centered firmly and correctly, a dangerous condition may occur that can cause personal injury and damage to your gas grill.

### SPIDERS & INSECTS:

Sometimes spiders and insects may crawl inside burners and nest there. In this case, the gas will flow from the front of the burner. It can create a dangerous situation and start a fire behind the valve panel. This can damage the grill and make the operation of it unsafe..